

## HEATED CLOTHING USER MANUAL

### Instructions for first use

Charge the batteries fully (around 6-7 hrs) before use. Remove the batteries from the product while charging. Once the batteries have been charged, plug the battery into the product (**heated jacket, heated bodywarmer, heated sleeping bag, etc.**) and place it in the dedicated pocket. Close the pockets so that the batteries cannot fall out.

### When are the batteries charged?

There will be a slow flashing red light on the battery during charging. The light will light up continuously once the batteries are charged. The battery is now ready for use.

### This is how the heat control works

- Press the on/off button for min. 3 seconds to activate the battery. The red LED will light up.
- You can adjust the power setting by pressing the button once, twice or three times.
- If you press and hold the button for a further three seconds, the battery will be deactivated.

### Battery life at different settings:

- Battery 7.4 V 2200: low setting: 6 hrs – medium setting: 4.5 hrs – highest setting 3 hrs
- Battery 7.4 V 2600: low setting: 7 hrs – medium setting: 5 hrs – highest setting: 3.5 hrs

*These times are averages and depend on external factors, such as the external temperature.*

### Precautions for use and maintenance

- Disconnect the batteries immediately if you experience pain or discomfort.
- Do not use if you are suffering health problems or if you are vulnerable (heart problems, pacemaker, etc.).
- Do not leave batteries to charge unsupervised, do not charge for more than five hours.
- Do not use any other batteries.

- We recommend washing the product by hand in luke warm water (15-30°C) to preserve the service life of the electrical circuits. Remove the batteries before washing. Do not dry in the machine or dryer.
- The battery can be charged and discharged around 400 cycles. In the event of a prolonged period out of use, we recommend charging the batteries every three months to preserve their service lives.
- Do not store in a location where the temperature could fall below -20°C or rise above 60°C.
- Stay away from fire and other sources of heat that could damage the batteries.
- Do not use if the electrical elements (battery, circuit, heating system) are damaged.

## Recycling

Dispose of the batteries in the same way as normal batteries (recycling centre, municipal collection point).